





Inserting/Changing the Batteries on the 95-112E and 95-112B



Center
battery
chamber

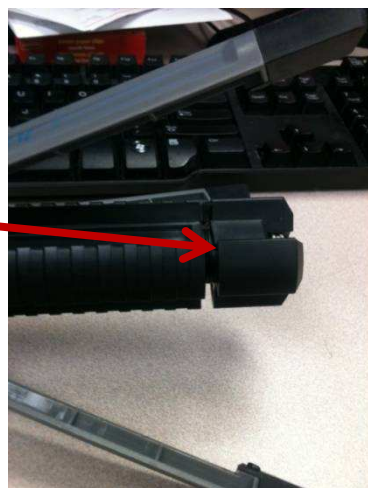

Battery cap

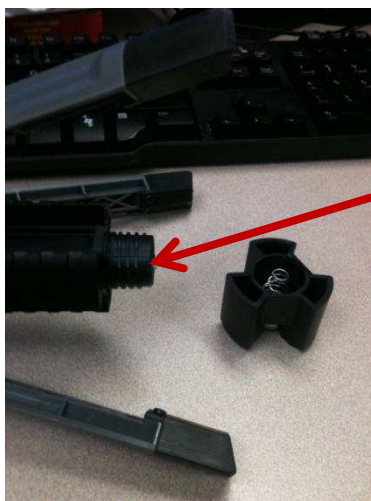

Insert
Batteries
here

The 95-112E and 95-112B are powered from by 3 AA alkaline batteries.

The batteries are housed In the center chamber if the flashlight. To insert/replace the batteries, first unscrew the cap on the bottom of the chamber.

Once the battery cap is unscrewed, insert new AA batteries, positive end first, into the chamber. Once the batteries are inserted, screw back on the chamber cap.

Once the batteries are inserted, the flashlight will be equipped for approximately 30 hours of runtime.