
Interlock Knife Blade Change




 Unscrew to start change blade

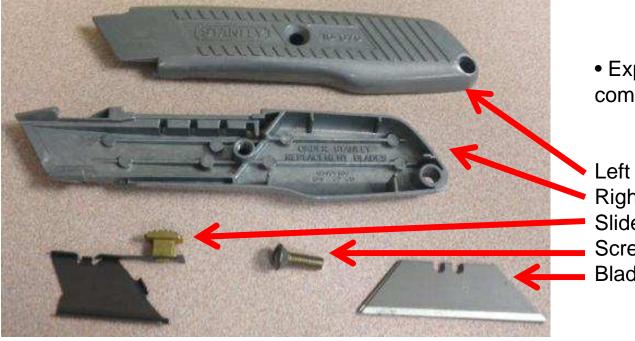


• Exploded view with component names

Left Casting Right Casting Slider Screw Blade (x3)

Interlock Knife Blade Change

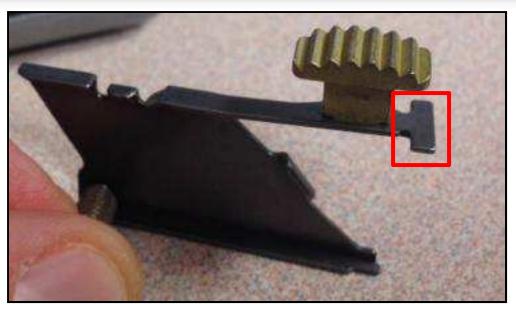


• To place the slider into the knife, you must align the slider tab (highlighted in red) into one the four notches in the casting (outlined in green).

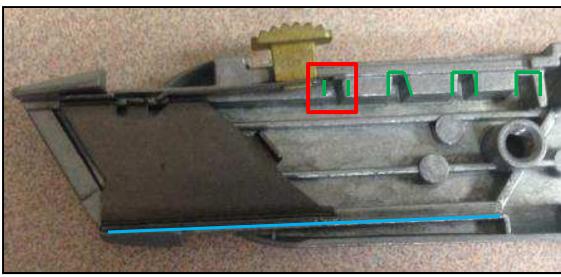

•The bottom of the slider will rest on a platform in the casting (blue line)

Interlock Knife Blade Change

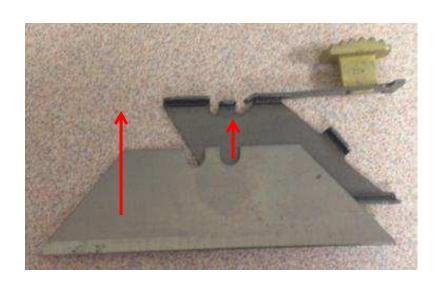



- To place the blade into the slider, you must align the back notch on the blade with the tab in the middle of the slider.
- •Insert the blade in a south-to-north direction as pictured at left and the blade will fall into place.
- This can be done with the slider in the knife, or separate (as pictured).

Interlock Knife Blade Change



 Image with blade in the slider, and the slider in the knife.



• To close, slide the nose of the left casting on to the right casting at a angle, and the two castings will align themselves.



• Tighten the screw to complete the blade change process.