

Table of Contents

Instrument Set-up	2
Introduction	2
Overview	2
Display	3
Insert batteries	3
Operations	4
Switching ON/OFF	4
Clear	4
Message Codes	4
Adjusting measuring reference / tripod	4
Multifunctional endpiece	5
Distance unit setting	5
Tilt unit setting	5
Timer (automatic release)	5
Beep ON/OFF	6
Illumination ON/OFF	6
Keypad lock ON	6
Keypad lock OFF	6
Measuring Functions	7
Measuring single distance	7
Permanent / Minimum-Maximum measuring	7
Add / Subtract	7
Area	8
Volume	9
Triangular area	10
Pythagoras (2-point)	11
Pythagoras (3-point)	11
Pythagoras (partial height)	12
Leveling	13
Stake out	13
Smart Horizontal Mode	14

Height tracking	14
Memory (20 last displays)	15
Delete Memory	15

Calibration

Calibration of tilt sensor (Tilt Calibration)	16
---	----

Technical Data

Message Codes

Care

Warranty

Safety Instructions

Areas of responsibility	18
Permitted use	19
Prohibited use	19
Hazards in use	19
Limits of use	19
Disposal	19
Electromagnetic Compatibility (EMC)	19
FCC statement (applicable in U.S.)	20
Laser classification	20
Labelling	20

Instrument Set-up

Introduction

 The safety instructions and the user manual should be read through carefully before the product is used for the first time.

 The person responsible for the product must ensure that all users understand these directions and adhere to them.

The symbols used have the following meanings:

 **WARNING**


Indicates a potentially hazardous situation or an unintended use which, if not avoided, will result in death or serious injury.

 **CAUTION**

Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor injury and/or appreciable material, financial and environmental damage.


 Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

Overview

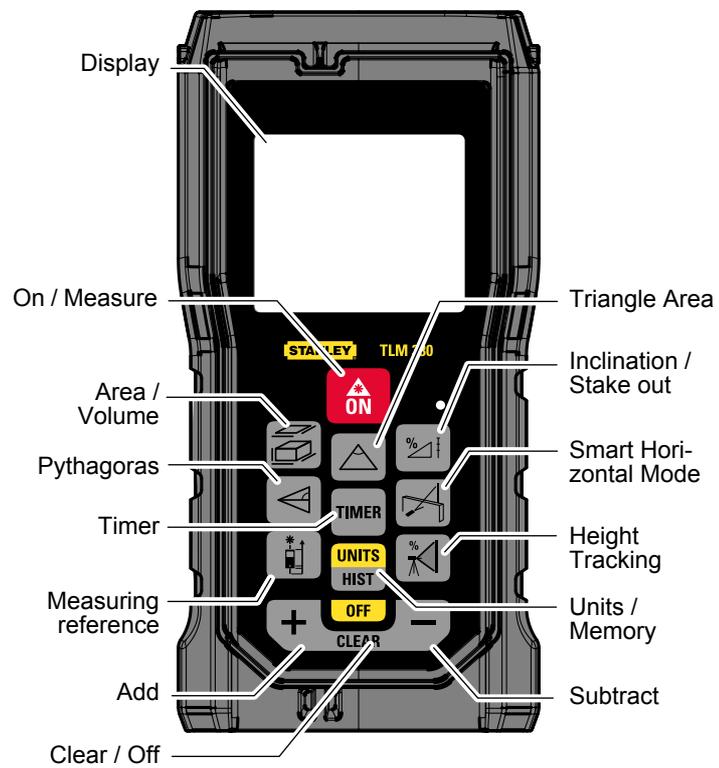


Instrument Set-up

Display

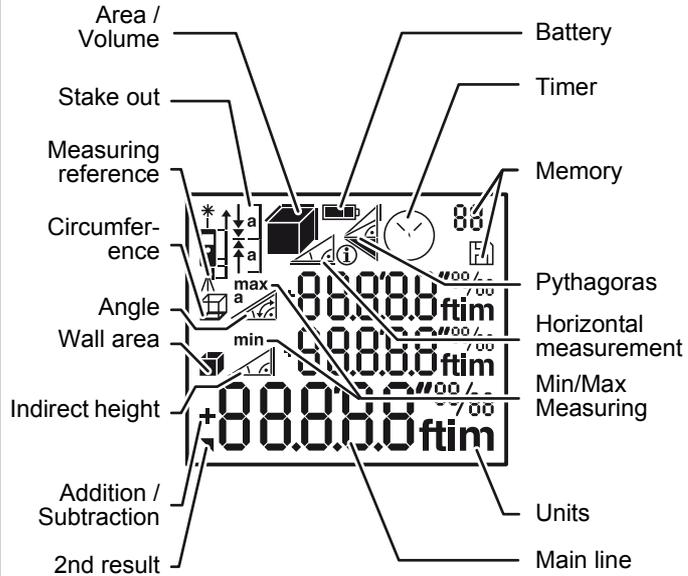


Insert batteries

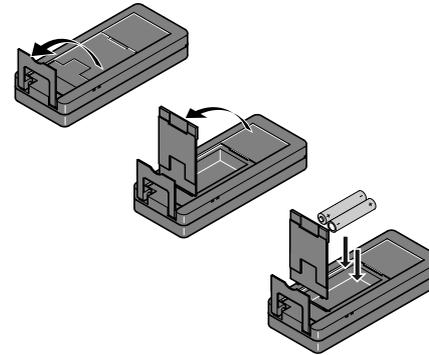

i

To ensure a reliable use, do not use zinc-carbon batteries. Change batteries when battery symbol is flashing.

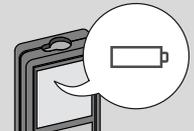


Switching ON/OFF



i

Press ON button 2 sec to start continuous laser mode. If no key is pressed for 180 sec, the device switches off automatically.

Clear

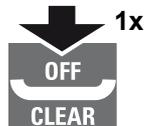

Undo last action.






Leave actual function, go to default operation mode.

Message Codes

If the info icon appears with a number, observe the instructions in section "Message Codes". Example:




Adjusting measuring reference / tripod

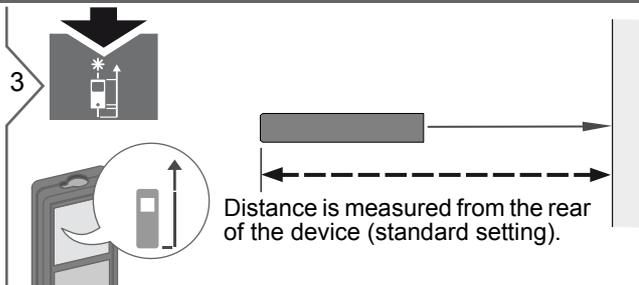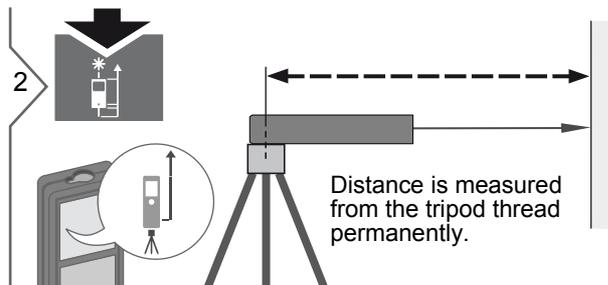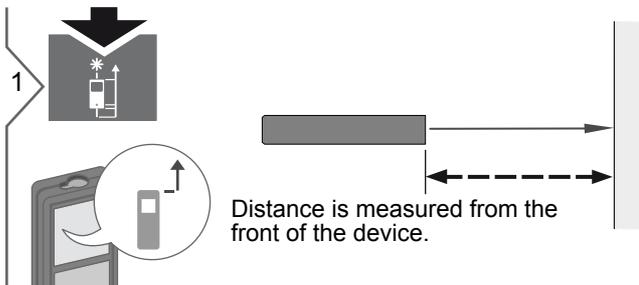

Operations

Multifunctional endpiece

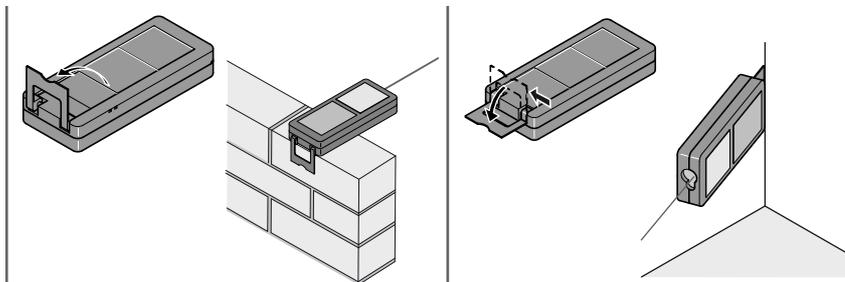

i The orientation of the endpiece is automatically detected and the zero point is accordingly adjusted.

Distance unit setting



2 sec

Switch between the following units:

0.000 m	0.00 ft
0.0000 m	0'00" 1/32
0.00 m	0.00 in
	0 in 1/32

Tilt unit setting

 
 


2 sec
simultaneously

Switch between the following units:

0.0 °
0.0 %

Timer (automatic release)



Adjust delay of automatic release (max. 60 sec, standard setting 5 sec)

 
i Once the key is released with the laser activated, the remaining seconds until the measurement are displayed in a countdown. The delayed release is recommended for precise aiming e.g. at long distances. It avoids shaking of the device when pressing the measurement key.

Operations

Beep ON/OFF




2 sec simultaneously



Illumination ON/OFF



2 sec simultaneously

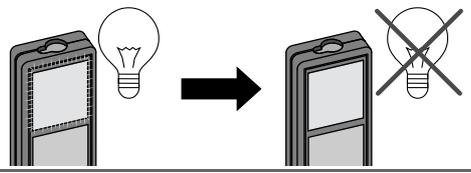


Keypad lock ON



2 sec simultaneously




Keypad lock OFF

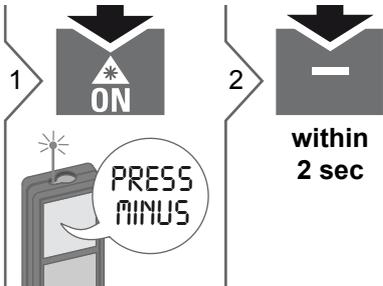

Measuring Functions


Measuring single distance

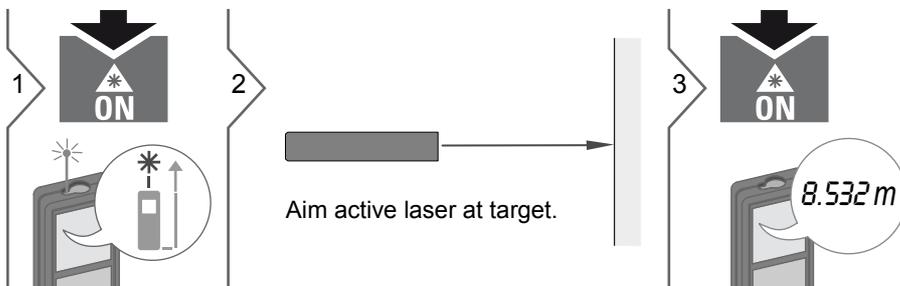

i

Target surfaces: Measuring errors can occur when measuring to colourless liquids, glass, styrofoam or semi-permeable surfaces or when aiming at high gloss surfaces. Against dark surfaces the measuring time increases.

Permanent / Minimum-Maximum measuring

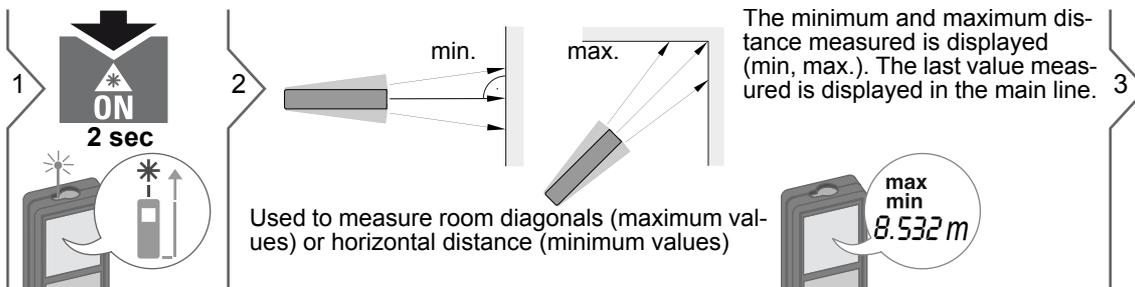


3



Stops permanent / minimum-maximum measuring.

Add / Subtract

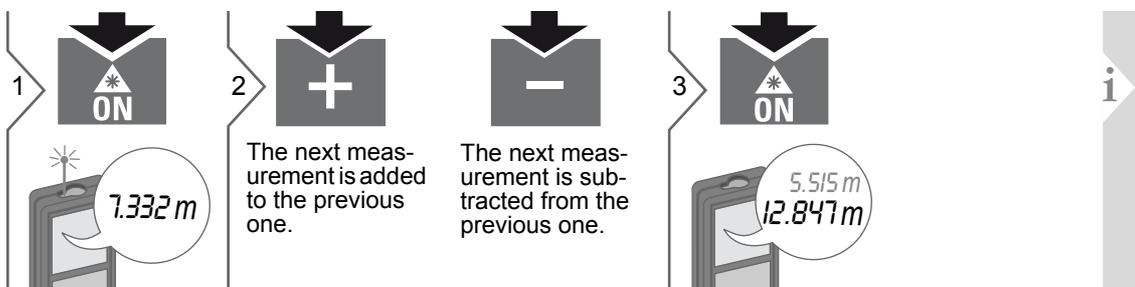


i


The result is shown in the main line and the measured value above. This process can be repeated as required. The same process can be used for adding or subtracting areas or volumes.

Measuring Functions

Area


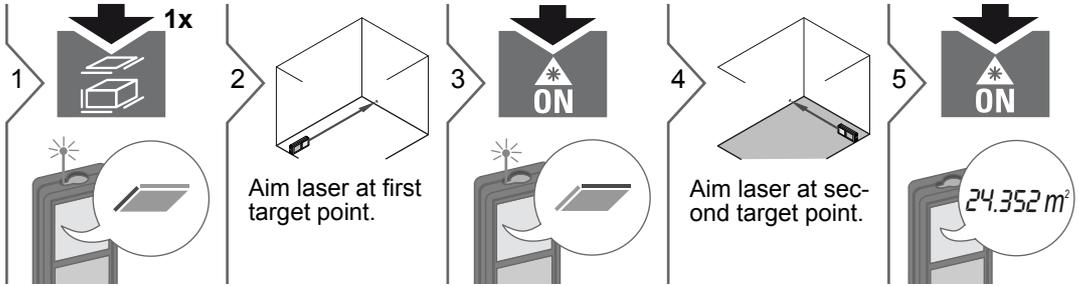



i The result is shown in the main line and the measured value above.

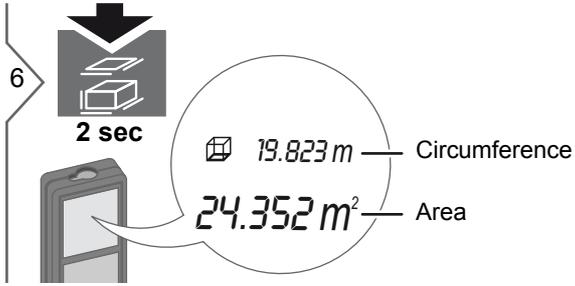



Measuring Functions

 

Volume

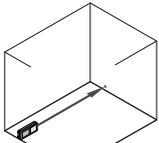1   2 Aim laser at first target point.

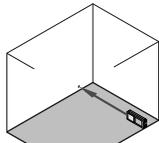3   4 Aim laser at second target point.

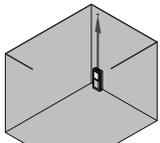5   6 Aim laser at third target point.

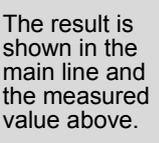7   **i** The result is shown in the main line and the measured value above.

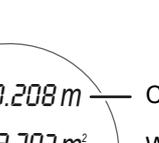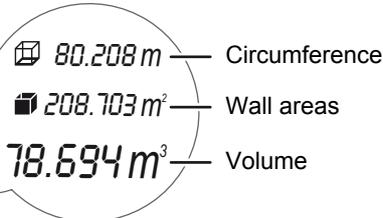8   

78.694 m³


80.208 m — Circumference

208.703 m² — Wall areas

78.694 m³ — Volume

Measuring Functions

Triangular area

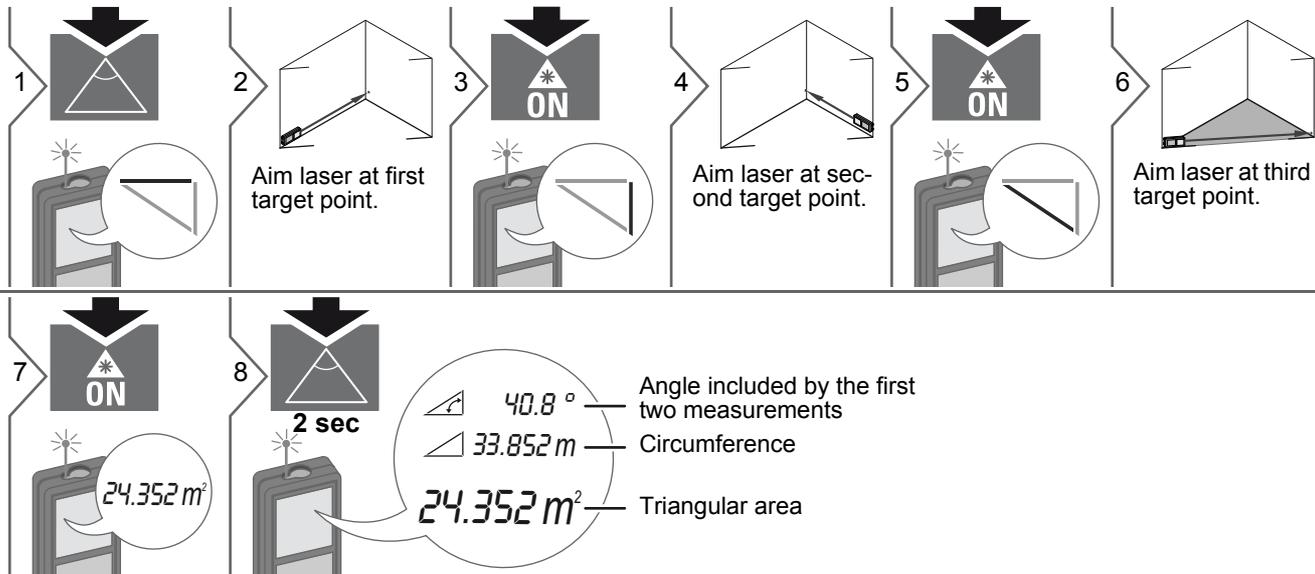

Measuring Functions

Pythagoras (2-point)

1 1x

2 Aim laser at upper point.

3 ON

4 Aim laser rectangular at lower point.

5 8.294 m

i The result is shown in the main line and the measured distance above. Pressing the measuring key for 2 sec in the function activates automatically Minimum or Maximum measurement.

Pythagoras (3-point)

1 2x

2 Aim laser at upper point.

3 ON

4 Aim laser at rectangular point.

5 ON

6 Aim laser at lower point.









7 ON

8.294 m

i The result is shown in the main line and the measured distance above. Pressing the measuring key for 2 sec in the function activates automatically Minimum or Maximum measurement.

Measuring Functions

Pythagoras (partial height)

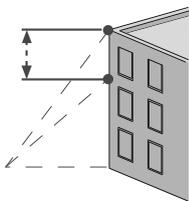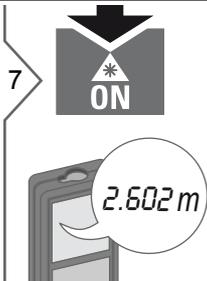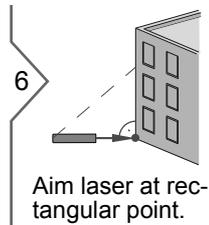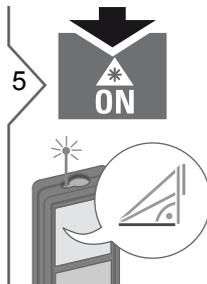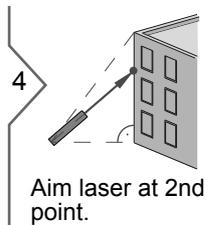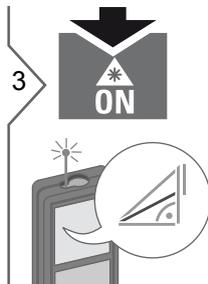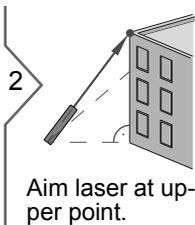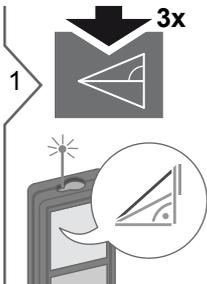

i




The result is shown in the main line and the measured distance above.
Pressing the measuring key for 2 sec in the function activates automatically Minimum or Maximum measurement.

Measuring Functions





Leveling

i


This function displays continuously the inclination of the device. From an inclination of $\pm 5^\circ$ the device starts beeping frequently. The more it gets to 0° the faster it beeps. If an inclination of $\pm 0.3^\circ$ is reached the device beeps continuously.

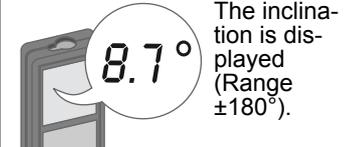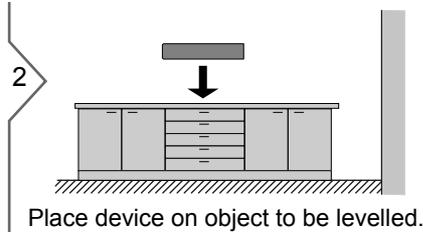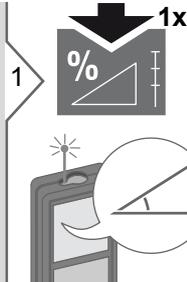

Stake out

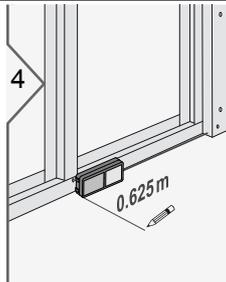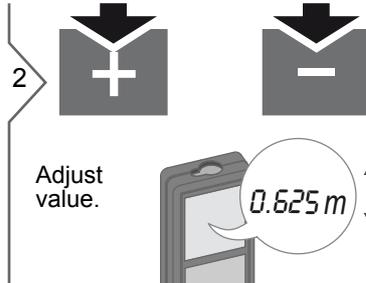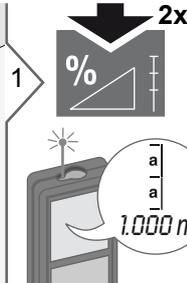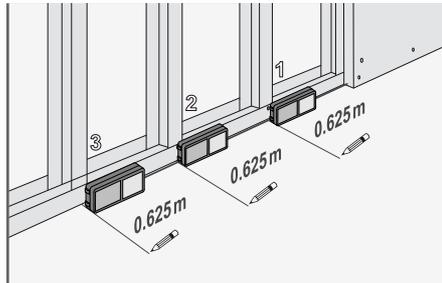

Move device slowly along the stake-out line. The distance to the next stake out point is displayed.

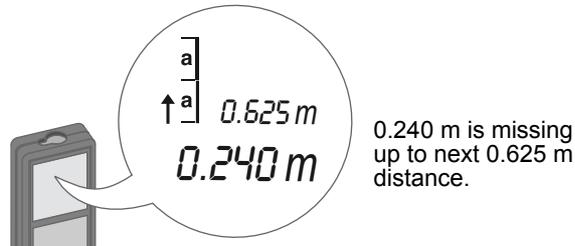


i

When approaching a stake out point to less than 0.1 m the instrument starts to beep. The function can be stopped by pressing the CLEAR/OFF button.


Measuring Functions

Smart Horizontal Mode

1 

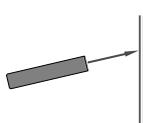
2  Aim laser at target.

3 

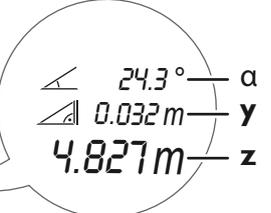

24.3° — α
 0.032 m — y
 4.827 m — z


(up to 360° and a transverse tilt of $\pm 10^\circ$)

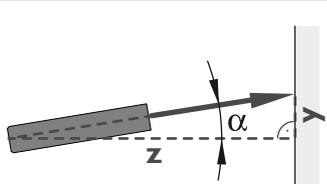


i Press key again to switch off horizontal measurement.


Height tracking

 
i This function displays continuously the tracking height if the device is turned on a tripod. No 2nd distance measuring is needed as only the angle is automatically measured.

1 

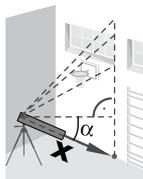
2  Aim laser at lower point.

3 

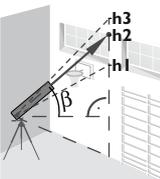4  Aim laser at upper points and angle/ height tracking starts automatically.

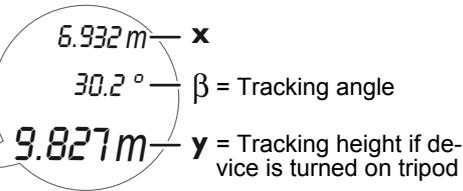5 

6.932 m — x
 30.2° — β = Tracking angle
 9.827 m — y = Tracking height if device is turned on tripod

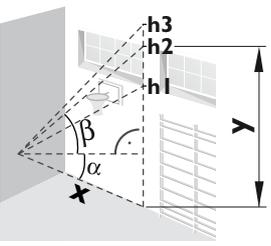



i The tracked height "y" is in 90° to the 1st aimed point "x".

6 


Stops Height tracking and displays last measurement.

Measuring Functions

Memory (20 last displays)

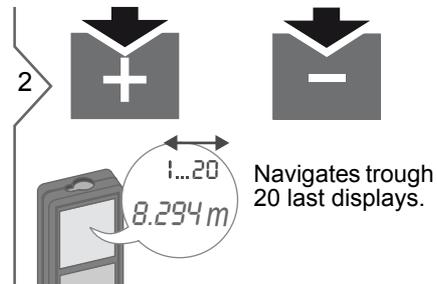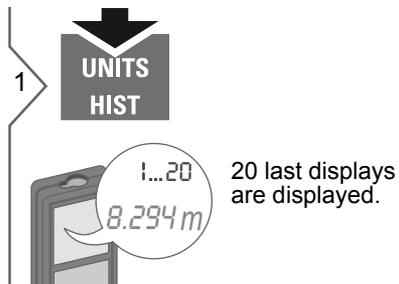

Delete Memory

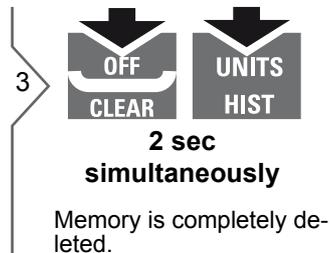

Calibration

Calibration of tilt sensor (Tilt Calibration)

1 **2 sec simultaneously**

MEAS 1 HOR
CAL

2 Place device on absolutely flat surface.

3 **MEAS 2 turn**
180°

4 Turn the device horizontally by 180° and place it again on absolutely flat surface.

5 **MEAS 3 VER**
CAL

6 Turn the device upside down and place it again on absolutely flat surface.

7 **MEAS 4 turn**
180°

8 Turn the device horizontally by 180° and place it again on absolutely flat surface.

9 **OK**
CAL

i After 2 sec the device goes back to the normal mode.

Technical Data

Distance measurement	
Typical Measuring Tolerance*	± 1.0 mm / 0.04 in ***
Maximum Measuring Tolerance**	± 2.0 mm / 0.08 in ***
Range of target plate	100 m / 330 ft
Typical Range*	80 m / 262 ft
Range at unfavourable condition ****	60 m / 197 ft
Smallest unit displayed	0.1 mm / 1/32 in
Ø laser point at distances	6 /30 / 60 mm (10 / 50 / 100 m)
Tilt measurement	
Measuring tolerance to laser beam*****	± 0.2°
Measuring tolerance to housing*****	± 0.2°
Range	360°
General	
Laser class	2
Laser type	635 nm, < 1 mW
Protection class	IP54 (dust- and splash water protected)
Autom. laser switch off	after 90 s
Autom. power switch-off	after 180 s
Battery durability (2 x AAA)	up to 5000 measurements
Dimension (H x D x W)	115.6 x 58 x 32 mm 4.55 x 2.28 x 1.26 in
Weight (with batteries)	155 g / 4.98 oz
Temperature range:	
- Storage	-25 to 70 °C -13 to 158 °F
- Operation	-10 to 50 °C 14 to 122 °F

* applies for 100 % target reflectivity (white painted wall), low background illumination, 25 °C

** applies for 10 to 500 % target reflectivity, high background illumination, - 10 °C to + 50 °C

*** Tolerances apply from 0.05 m to 10 m with a confidence level of 95%. The maximum tolerance may deteriorate to 0.1 mm/m between 10 m to 30 m and to 0.2 mm/m for distances above 30 m

**** applies for 100 % target reflectivity, background illumination of approximately 30'000 lux

***** after user calibration. Additional angle related deviation of +/- 0.01° per degree up to +/-45° in each quadrant. Applies at room temperature. For the whole operating temperature range the maximum deviation increases by +/- 0.1°.

i For accurate indirect results, the use of a tripod is recommended. For accurate tilt measurements a transverse tilt should be avoided.

Functions	
Distance measuring	yes
Min/Max measuring	yes
Permanent measuring	yes
Stake-out	yes
Addition/Subtraction	yes
Area	yes
Volume	yes
Triangular area	yes
Pythagoras	2-point, 3-point, partial height
Smart Horizontal Mode / Indirect height	yes
Height tracking	yes
Levelling	yes
Memory	20 displays
Beep	yes
Illuminated display	yes
Multifunctional endpiece	yes

Message Codes

If the message **Error** does not disappear after switching on the device repeatedly, contact the dealer.

If the message **InFo** appears with a number, press the Clear button and observe the following instructions:

No.	Cause	Correction
156	Transverse tilt greater than 10°	Hold the instrument without any transverse tilt.
162	Calibration mistake	Make sure, the device is placed on a absolutely horizontal and flat surface. Repeat the calibration procedure. If the mistake still occurs, contact your dealer.
204	Calculation error	Perform measurement again.
252	Temperature too high	Let device cool down.
253	Temperature too low	Warm device up.
255	Received signal too weak, measuring time too long	Change target surface (e.g. white paper).
256	Received signal too high	Change target surface (e.g. white paper).
257	Too much background light	Shadow target area.
258	Measurement outside of measuring range	Correct range.
260	Laser beam interrupted	Repeat measurement.

Care

- Clean the device with a damp, soft cloth.
- Never immerse the device in water.
- Never use aggressive cleaning agents or solvents.

Warranty

The Stanley TLM has a two-year warranty. For further information on this, contact your dealer.

Subject to change (drawings, descriptions and technical data).

Safety Instructions

The person responsible for the instrument must ensure that all users understand these directions and adhere to them.

Areas of responsibility

Responsibilities of the manufacturer of the original equipment:

Stanley Tools

701 E. Joppa Road

Towson, Maryland 21286

www.STANLEYLASERS.com

www.STANLEYTOOLS.com

www.STANLEYTOOLS.eu

The company above is responsible for supplying the product, including the User Manual in a completely safe condition.

The company above is not responsible for third party accessories.

Responsibilities of the person in charge of the instrument:

- To understand the safety instructions on the product and the instructions in the User Manual.
- To be familiar with local safety regulations relating to accident prevention.
- Always prevent access to the product by unauthorised personnel.

Safety Instructions

Permitted use

- Measuring distances
- Tilt measurement

Prohibited use

- Using the product without instruction
- Using outside the stated limits
- Deactivation of safety systems and removal of explanatory and hazard labels
- Opening of the equipment by using tools (screwdrivers, etc.)
- Carrying out modification or conversion of the product
- Use of accessories from other manufacturers without express approval
- Deliberate dazzling of third parties; also in the dark
- Inadequate safeguards at the surveying site (e.g. when measuring on roads, construction sites, etc.)
- Deliberate or irresponsible behaviour on scaffolding, when using ladders, when measuring near machines which are running or near parts of machines or installations which are unprotected
- Aiming directly in the sun

Hazards in use

WARNING

Watch out for erroneous measurements if the instrument is defective or if it has been dropped or has been misused or modified. Carry out periodic test measurements. Particularly after the instrument has been subject to abnormal use, and before, during and after important measurements.

CAUTION

Never attempt to repair the product yourself. In case of damage, contact a local dealer.

WARNING

Changes or modifications not expressly approved could void the user's authority to operate the equipment.

Limits of use

-  Refer to section "Technical data".
- The device is designed for use in areas permanently habitable by humans. Do not use the product in explosion hazardous areas or in aggressive environments.

Disposal

CAUTION

Flat batteries must not be disposed of with household waste. Care for the environment and take them to the collection points provided in accordance with national or local regulations.

The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.



Adhere to the national and country specific regulations.

Product specific treatment and waste management can be downloaded from our homepage.

Electromagnetic Compatibility (EMC)

WARNING

The device conforms to the most stringent requirements of the relevant standards and regulations.

Yet, the possibility of causing interference in other devices cannot be totally excluded.

Safety Instructions


FCC statement (applicable in U.S.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Laser classification

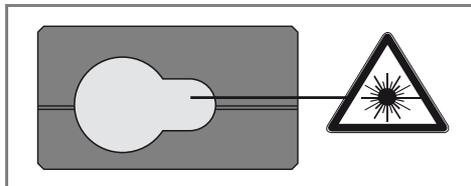

The device produces visible laser beams, which are emitted from the instrument: It is a Class 2 laser product in accordance with:

- IEC60825-1 : 2007 „Radiation safety of laser products“

Laser Class 2 products:

Do not stare into the laser beam or direct it towards other people unnecessarily. Eye protection is normally afforded by aversion responses including the blink reflex.



⚠ WARNING

Looking directly into the beam with optical aids (e.g. binoculars, telescopes) can be hazardous.

⚠ CAUTION

Looking into the laser beam may be hazardous to the eyes.

Labelling

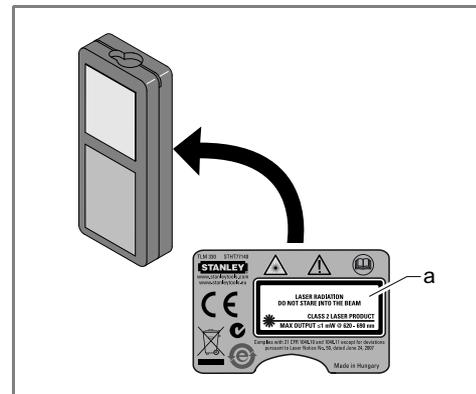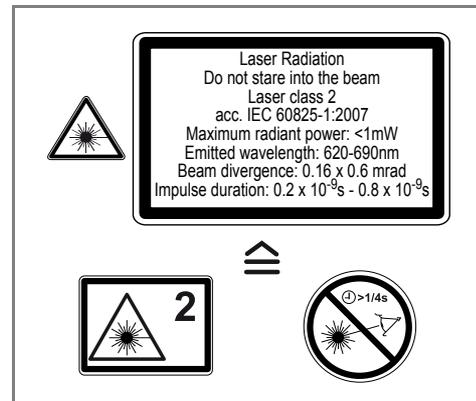

Attach the laser sticker (a) of your country language.