



STANLEY

HOW TO SET THE STANLEY PLANE


STANLEY

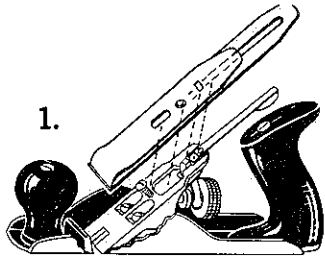


1. To put the Plane together lay the Plane Iron, bevel side down, on the Frog. Be sure the Roller on the Lateral Adjusting Lever, the end of the "Y" Adjusting Lever and the head of the Plane Iron Cap Screw are correctly seated.

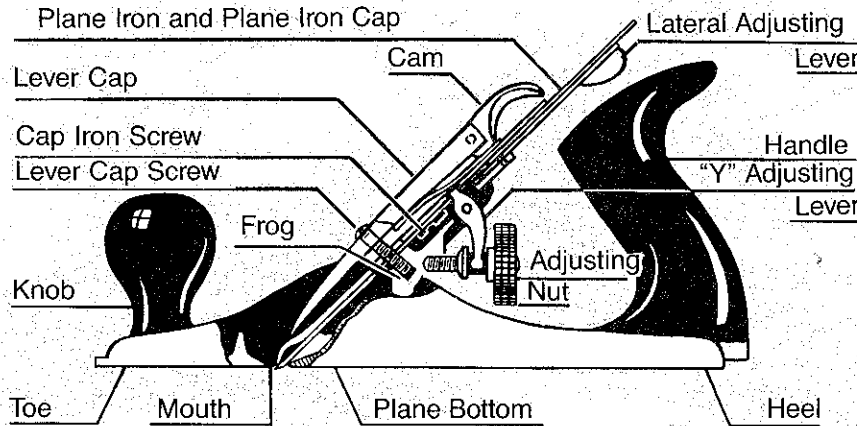

To adjust for the thickness of the shaving sight along the bottom of the Plane and turn the Adjusting Nut until the cutting edge projects about the thickness of a hair.

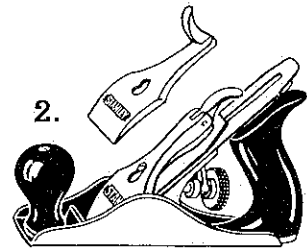


2. Slip the Lever Cap under the Lever Cap Screw and press down the Cam. If the Plane Iron is in the correct position the Cam will easily snap in place. If the Cam will not snap in place easily, slightly loosen the Lever Cap Screw. If the Plane Iron, is not firmly held when the Cam is in place slightly tighten the Lever Cap Screw.

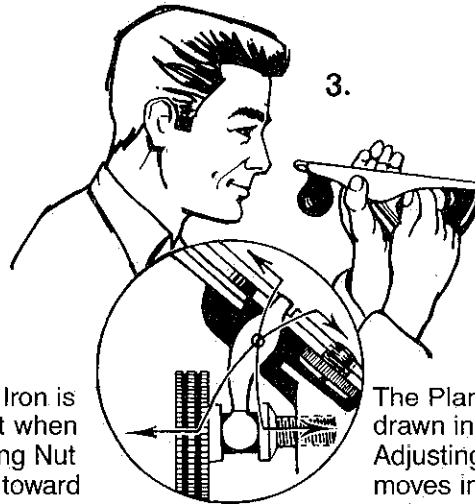


The Plane Iron is pushed out when the Adjusting Nut moves out toward the handle.

The Plane Iron is drawn in when the Adjusting Nut moves in toward the Frog.

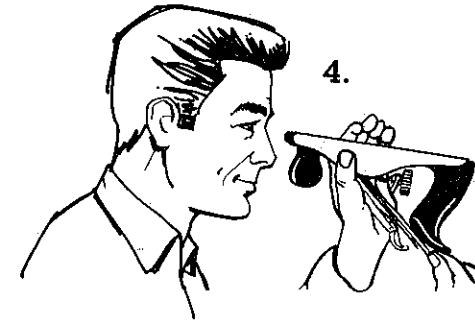

4. To adjust for the evenness of the shaving sight along the bottom of the Plane and move the Lateral Adjusting Lever toward the right or the left.

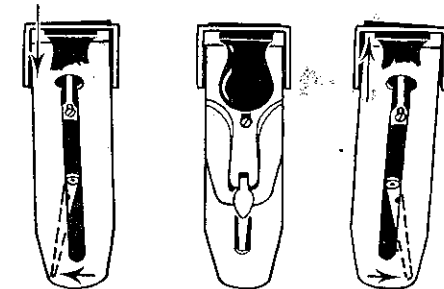

Knob, Lever Cap and Plane Iron Cap removed to show the action of the Lateral Adjusting Lever.

EDUCATIONAL DEPARTMENT
CHART NO. 17
BY R.O. REGER