

## DIRECTIONS



**CAUTION:** Before using WEB-CLAMP, make sure there are two turns of WEB around the shaft, otherwise WEB may be damaged.

### WHEN SLIPPED OVER WORK

- A** Hold frame in left hand. Let rolled webbing fall. Insert finger of right hand between frame and web and pull.
- B** Place loop over object to be held.
- C** Pull end of web to remove slack.
- D** Tighten with  $\frac{3}{16}$  inch wrench or screwdriver. Do not apply more tension than necessary to avoid damaging the work.
- E** To release, tighten nut slightly and press down on lever.

**CAUTION:** Protect webbing from sharp edges which might cut through the web and release the load.




## IMPORTANT

- F** To hold OBJECTS WHICH CANNOT BE SLIPPED INTO LOOP—Remove free end of web from frame. Place around object without twisting. Re-insert web in floating slot, from bottom frame up. Pull up on web. Then insert end of web into fixed slot.


10-79  
3264

WORK SAFELY WITH TOOLS BY  
WEARING SAFETY GOGGLES.

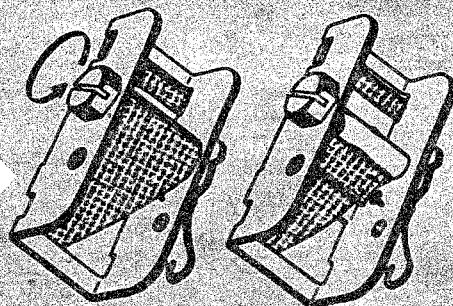


THIS


NOT THIS

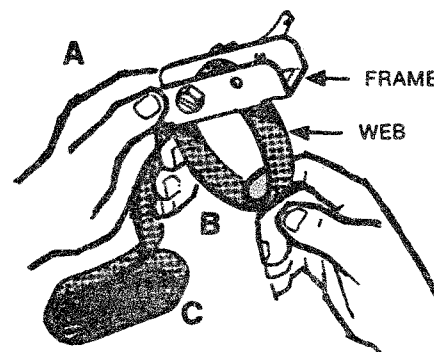

LOOP READY FOR USE

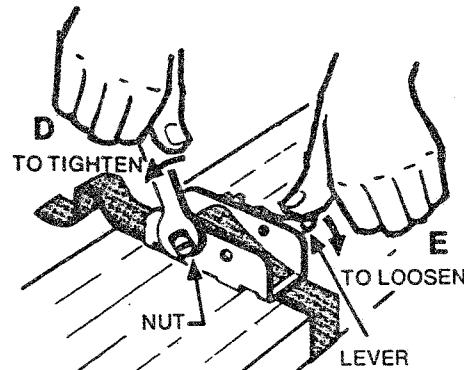

TO TIGHTEN AND RELEASE

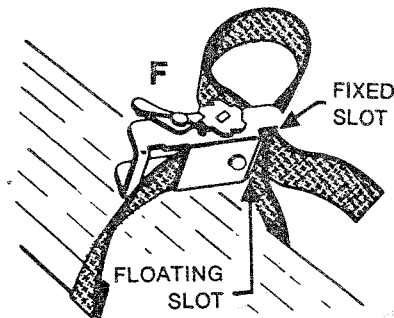

INSERT WEB TO FORM LOOP